

# M1709Z Firmware Update

---

Please follow the steps below to update the firmware on your M1709Z digital photo frame.

**WARNING: Only use firmware provided by Micca and never flash firmware intended for a different model or brand. Flashing incorrect firmware will permanently damage the photo frame beyond repair and is not covered by warranty.**

1. Prepare an empty SD card that is 32GB or smaller. Do not use a USB drive.
2. Download the appropriate firmware ZIP file from [www.miccatron.com](http://www.miccatron.com).
3. Open the ZIP file and copy the ACTUPGRADE.bin file to an empty SD card. Do not use a USB drive.
4. Insert the SD card into the photo frame and turn on the photo frame.
5. Navigate to the Settings menu, then select System Setup → System Upgrade → Yes
6. The photo frame will now display a firmware update progress bar. DO NOT TURN OFF THE PHOTO FRAME OR OTHERWISE DISTURB THE UPGRADE PROGRESS
7. When finished, the photo frame will restart and display the main menu.
8. Turn off the photo frame, remove the SD card, and delete the ACTUPGRADE.bin file from the SD card.